



SEGA SATURN™ 3D CONTROL PAD

Thank you for purchasing the Sega Saturn 3D Control Pad. Please read the following instructions carefully before use and keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read Instructions:** All these safety and operating instructions should be read before the Sega Saturn 3D Control Pad is operated.
- Retain Instructions:** The safety and operating instructions should be retained for future reference.
- Heed Warnings:** All warnings on the product and in this instruction manual should be adhered to.
- Follow Instructions:** All operating and use instructions should be followed.



CAUTION

- Store the 3D Control Pad in a safe place when not in use. If the 3D Control Pad is left lying on the floor or other unsafe area, it may be broken, and injury may result.
- Do not place the 3D Control Pad on an unstable surface. It may fall, causing injury or damage to the unit.
- Do not twist or spin the 3D Control Pad by the cable as it may cause injury or damage to the unit.

PROPER CARE OF THE SEGA SATURN 3D CONTROL PAD

The 3D Control Pad is a precision electronic instrument, so please be aware of the points below when you use it.
Ignoring the following instructions can result in damage to the 3D Control Pad.

- Do not disassemble or alter the 3D Control Pad. No parts inside the unit can be serviced by the user. If you have a problem, contact your Sega dealer.
- Do not disconnect the 3D Control Pad or any other peripheral during gameplay as doing so may result in malfunction.
- Make sure the Sega Saturn unit is turned off before connecting or disconnecting the 3D Control Pad.
- The 3D Control Pad should not be situated near sources of heat, such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat. Failure to comply with this can result in a risk of damage to the unit.
- Do not use the 3D Control Pad near water, for example, near a bath tub, wash bowl, kitchen sink, washing machine, swimming pool or in a wet basement. Failure to comply with this can result in a risk of damage to the unit.
- The 3D Control Pad should not be situated near sources of steam vapor, such as near a kitchen stove or humidifier. Failure to comply with this can result in a risk of damage to the unit.
- Sudden temperature changes may cause condensation inside the 3D Control Pad. Should this occur, disconnect the 3D Control Pad from the Sega Saturn and leave it for at least an hour before using.
- Do not drop the 3D Control Pad or subject it to shocks.
- Do not place heavy objects on the 3D Control Pad or cable.
- Do not allow the 3D Control Pad connector terminals to come into contact with metallic objects or water.
- Attach only the 3D Control Pad to the Connector Unit. Attempting to use other equipment with the Connector Unit may damage the Connector Unit and the Sega Saturn.
- Always unplug the 3D Control Pad from the Sega Saturn before connecting or disconnecting the Connector Unit.
- Do not detach the Connector Unit from the 3D Control Pad during play, as it may damage the unit.
- Make sure to unplug the 3D Control Pad from the Sega Saturn unit before cleaning.
- Use only a soft, dry cloth to clean your 3D Control Pad. Do not use liquid solvents, cleansers or soap.
- Hold the plug when disconnecting the 3D Control Pad cable.
- Do not twist or bend the 3D Control Pad cable.

Use the 3D Control Pad under the following conditions:

- Temperature: 32°F to 95°F (0°C to 35°C)
- Humidity: 10% to 80% RH

WARRANTY

Sega of America, Inc., warrants to the original consumer purchaser that the Sega Saturn 3D Control Pad and all component parts shall be free from defects in material and workmanship for a period of ninety days from the date of purchase. If a defect covered by this limited warranty occurs during this 90-day warranty period, Sega will repair or replace the defective system or component part, at its option, free of charge. This limited warranty does not apply if the defects have been caused by negligence, accident, unreasonable use, modification, tampering, or any other causes not related to defective materials or workmanship. Additionally, this warranty shall not be valid if the serial number of the 3D Control Pad unit has been altered, defaced, or removed in any way.

To receive warranty service, call the Sega Consumer Service Department at:

1-800-USA-SEGA.

Our Consumer Service Department is in operation seven days a week. **DO NOT RETURN YOUR 3D CONTROL PAD TO YOUR RETAIL SELLER.** Return the system to Sega Consumer Service only. Please call first for further information.

If the Sega technician is unable to solve the problem by phone, we will provide you with instructions on returning your defective system to us. The cost of returning the system to Sega's Service Center shall be paid by the purchaser.

REPAIRS AFTER EXPIRATION OF WARRANTY

If your 3D Control Pad requires repairs after termination of the 90-day limited warranty period, you may contact the Sega Consumer Service Department at the number listed above. If the technician is unable to solve the problem by phone, he or she will advise you of the estimated cost of repair. If you choose to have the repair done, you will need to return the defective merchandise, freight prepaid and insured against loss or damage, to Sega's Service Center with an enclosed check or money order payable to Sega of America, Inc. for the amount of the cost estimate provided to you by the technician. If, after inspection, it is determined that your system cannot be repaired, it will be returned to you and your payment will be refunded.

LIMITATIONS ON WARRANTY

Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to ninety days from the date of purchase and are subject to the conditions set forth herein. In no event shall Sega of America, Inc., be liable for consequential or incidental damages resulting from the breach of any express or implied warranties. The provisions of this limited warranty are valid in the United States only. Some states do not allow limitations on how long an implied warranty lasts, or exclusion of consequential or incidental damages, so the above limitation or exclusion may not apply to you. This warranty provides you with specific legal rights. You may have other rights which vary from state to state.

Note: Using unlicensed products may void the user warranty.

IF YOU NEED TECHNICAL ASSISTANCE WITH ANY SEGA PRODUCT, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-USA-SEGA. P.O. Box 8097, Redwood City, CA 94063-0912.

Sega is registered in the U.S. Patent and Trademark office. Sega Saturn is a trademark of SEGA.

 
© SEGA ENTERPRISES, LTD. 1996

<670-8776A>

OPERATING THE SEGA SATURN 3D CONTROL PAD UNIT


Turn off the power to the Sega Saturn before connecting or disconnecting the 3D Control Pad. Operation varies depending on the software. For details, refer to the instruction manuals of individual software titles.

TOP VIEW

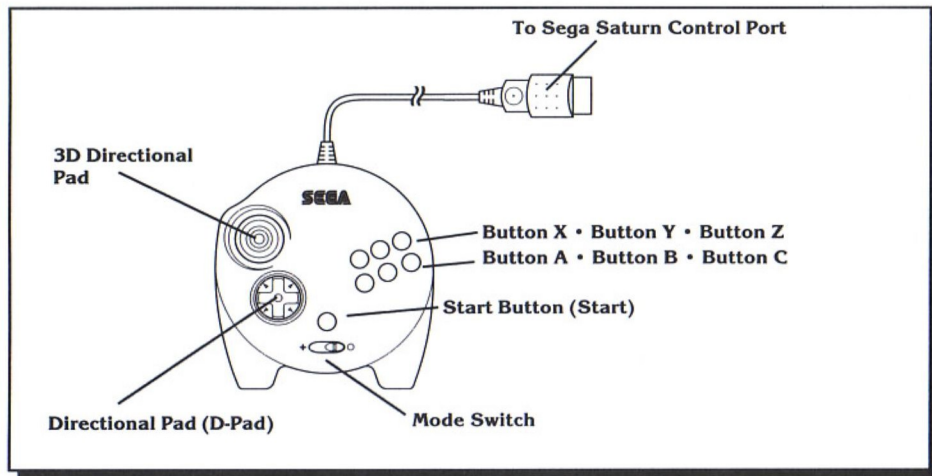


MODE SWITCH USE

 STANDARD CONTROL PAD MODE: + MODE




- When the Mode Switch is set to the Standard Control Pad Mode, the following buttons can be used: D-Pad, Start, Button A, Button B, Button C, Button X, Button Y, Button Z, Trigger L, and Trigger R. The 3D Directional Pad does not function in this mode, and Trigger L and Trigger R are not analog.
- If the software you're using doesn't support the 3D Control Pad function, please set the switch to this mode.

 3D CONTROL PAD MODE: ○ MODE




- When the Mode Switch is set to the 3D Control Pad Mode, the following buttons can be used: 3D Directional Pad, D-Pad, Start, Button A, Button B, Button C, Button X, Button Y, Button Z, Trigger L, and Trigger R.
- If the software you're using doesn't support the 3D Control Pad function, please set the switch to the Standard Control Pad mode.

 BOTTOM VIEW

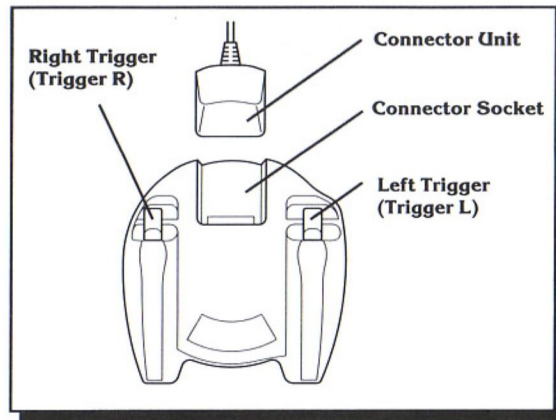

CONNECTOR UNIT

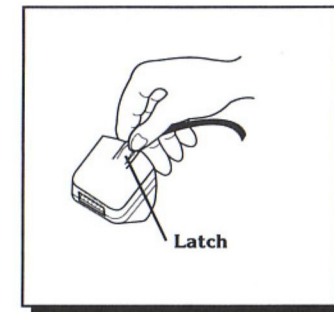 

ATTACHING/DETACHING THE CONNECTOR UNIT

To attach the Connector Unit, align it with the guides on either side of the Connector Socket and slide the Connector Unit into the Connector Socket until the Latch clicks into place, and the Connector Unit clicks into place.

To detach the Connector Unit, press down on the Latch and pull it directly out of the Connector Socket.

ABOUT THE 3D PAD MODE

Setting the Mode Switch to the 3D Control Pad Mode (the ○ Mode) allows you to use the 3D Directional Pad, Trigger L and Trigger R in analog mode. With the use of these functions, you gain a new level of control over gameplay.

Notes

- Avoid pressing the 3D Directional Pad, Trigger L or Trigger R when turning on your Sega Saturn unit, or when switching modes. If you press one of these buttons, you may encounter control problems during gameplay.
- If you change Modes during gameplay you may encounter control problems during gameplay.
- When playing games not specifically designed for the 3D Control Pad, make sure to set the Mode Switch to the Standard Control Pad Mode (the + Mode). If you don't, you may encounter control problems during gameplay.
- Make sure the Mode Switch is set fully to the left or right (depending on the desired Mode setting). If the Mode Switch is set in the center, you may encounter control problems during gameplay.

TROUBLESHOOTING

If your 3D Control Pad fails to operate properly, please check the following before contacting your Sega Dealer.

<p><i>Game does not function properly</i></p>	<ul style="list-style-type: none"> • Check to see that the Sega Saturn unit is properly connected, and the game CD is inserted correctly in the unit. • Check to see that the 3D Control Pad is set to the ○ Mode, and that the game software is compatible with the 3D Control Pad. • Turn off the Sega Saturn unit and turn it on again, making sure not to press any buttons or triggers on the 3D Control Pad.
<p><i>Character/Craft movement stops in the ○ Mode when using the 3D Directional Pad.</i></p>	<ul style="list-style-type: none"> • Turn off the Sega Saturn unit and turn it on again, making sure not to press any buttons or triggers on the 3D Control Pad.