

PlayPal Sega Portable Player - Instruction Manual

PLAYPAL™

INCLUDES 20 8-BIT SEGA GAMES

QUICK START GUIDE



Appearance and Key List

The image below shows the location of the connectors and keys, the function of each key is listed also. (The following illustrations are for reference only.)



How do you play the Game?



- 1 Push the "On/Off" key on "On" status to turn on Game Player.
- 2 Press "up" or "down" of D-Pad to select one of your favorite Game titles, then press the "A" key to select it.
- 3 Press the "START" key to play the current Game selected.

How do you switch back to Game menu quickly while playing the game?



Press "RESET" key for more than 2 seconds, then release the key, the screen will be back to the top level.

How do you adjust the volume?

Press the "VOL+" or "VOL-" key to adjust the volume for optimal audio effect.

How do you turn off the Game Player?

Push the "On/Off" key on "Off" status to turn off Game Player.

The content of this document is subject to change without notice.

To learn more about PlayPal™ and PlayPal™ products visit our website at:
www.playpalworld.com

Made in China
© 1543321 Ontario Inc
All Rights Reserved.

SEGA is a registered trademark of SEGA Corporation. PlayPal™ is manufactured for & distributed by 1543321 Ontario Inc. under license by AtGames Games software © SEGA Corporation. PlayPal™ is a trademark used under license by 1543321 Ontario Inc. Copyright 2006 1543321 Ontario Inc. All rights reserved.